

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск (3496)41-32-12

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://gea.nt-rt.ru/> || gsg@nt-rt.ru

ОБОРУДОВАНИЕ ДЛЯ ПИЩЕВОЙ ПРОМЫШЛЕННОСТИ CRUMBMASTER Технические характеристики



General info

The GEA CrumbMaster® is a state of the art breadring machine suited for a wide range of breadcrumbs. Unique crumb circulation system virtually eliminates crumb damage. Integrated design keeps cleaning simple. Simple to operate. Handles both fine and coarse crumbs efficiently. Can apply different crumb sizes to top and bottom of product.

- Suited for a wide range of breadcrumbs
- Lowest crumb break down in the industry
- Easy cleaning
- Can apply different crumb sizes to top and bottom
- Handles both fine and coarse crumbs efficiently



Working principle

A conveyor belt carries the products through a bottom layer of breadring, while the top coating is applied from a hopper above. The crumb divider allows different crumb sizes to be applied to the top and bottom of the product. The extra long breadring bed, together with an adjustable pressure roller ensures optimum coating adhesion. Excess breadring is blown off and returned to the circulation system. The built-in blower with closed air circulation system minimises dust escape. The thickness of the top and bottom coating layers can be independently adjusted from the outside of the machine.

- The crumb divider allows different crumb sizes
- Optimum coating adhesion
- Built-in blower minimises dust escape
- Top and bottom coating can be independently adjusted
- Integrated design keeps cleaning simple



Performance

The crumb divider allows different crumb sizes to be applied to the top and bottom of the product. Industry standard in coating with lowest crumb breakdown. Can handle both fine and coarse crumbs.

- The crumb divider allows different crumb sizes
- Proved lowest crumb breakdown
- Simple to operate
- Can apply different crumb sizes to top and bottom
- Integrated design keeps cleaning simple

Output quality

Industry standard in coating with lowest crumb breakdown.
Can handle both fine and coarse crumbs up to J-crumbs.

- Industry standard in coating
- Proved lowest crumb breakdown
- Can handle both fine and coarse crumbs

Hygiene

The machine design, without any loose parts, provides quick cleaning cycles and adds line availability combined with easy access to the machine interior. A hinged cover around the vertical auger provides easy access for cleaning. The machine is self-draining. All drive shafts are welded and without wedges.

- Easy access for cleaning
- The machine is self-draining
- All drive shafts are welded and without wedges



Controls

Process control is achieved by means of push buttons. Top and bottom coating layers can be independently adjusted from the outside of the machine.

- Push buttons

Technical specifications

Label	GEA CrumbMaster® 400	GEA CrumbMaster® 600	GEA CrumbMaster® 1000	Unit
Belt width	400	600	1000	mm
Beltspeed min/max	2 to 20	2 to 20	2 to 20	meter/min
Dimension length	2620	2620	2620	mm
Dimension width	940	1140	1790	mm
Dimension height	2350	2350	2350	mm
Machine weight	450	560	900	kg
Min. product height	16	16	16	mm
Max. product height	60	60	60	mm

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск (3496)41-32-12

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://gea.nt-rt.ru/> || gsg@nt-rt.ru